

Assembly Instructions



Yacare



 **Bluestreakequipment** MAGNETICS
APPLICATION DRIVEN DESIGN

Bluestreak Equipment
1645 Hwy #3, Delhi, Ontario, Canada N4B 2W6

How it Ships



The Yacare Magnetic Sweeper is packaged and shipped on one pallet. When shipped internationally the Yacare is shipped in a ISPM-15 compliant international steel framed crate.



Remove the shrink wrap, banding, boxes and cardboard packaging from the pallet.

Open all three boxes and unpackage/remove contents.

Step 1. Unpackage all items from the pallet

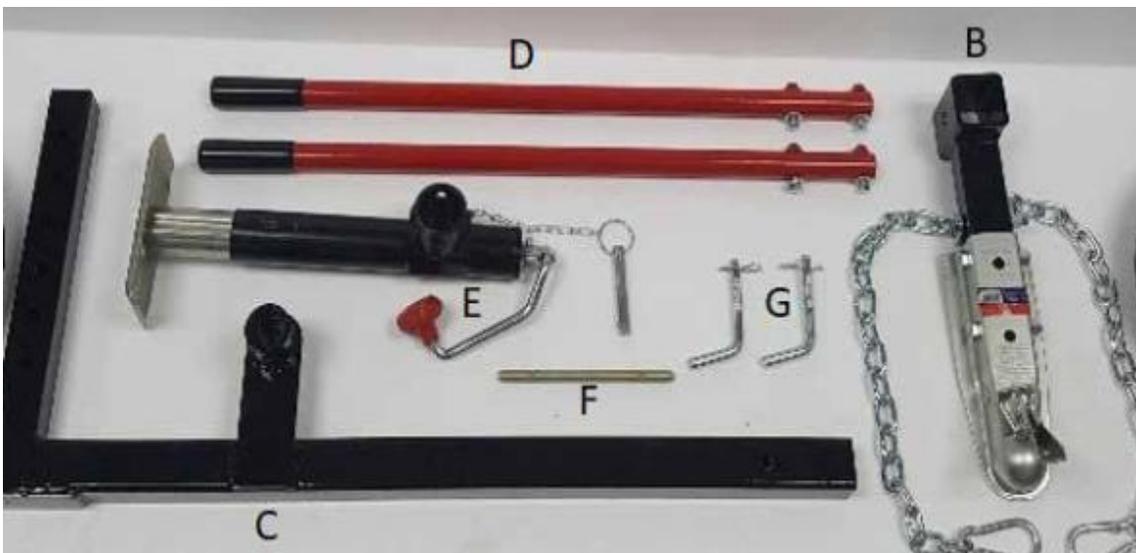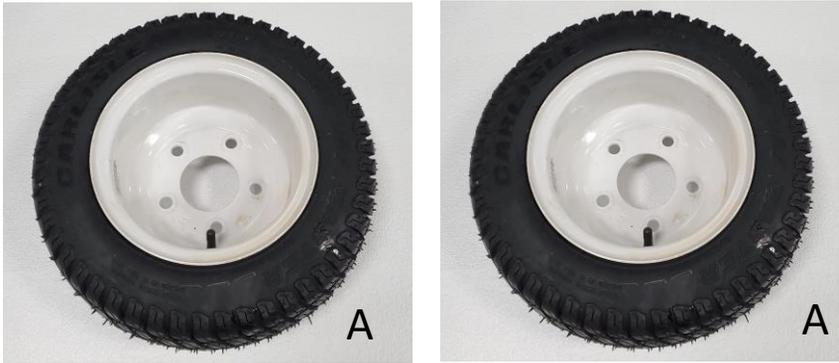

Items on the pallet (not including chassis of Yacare magnetic sweeper)

- A – 15" Five Bolt Wheels (2pcs)
- B – 2" Ball Coupler Assembly (1pc)
- C – Steel Tongue (1pc)
- D – Release Handles (2pcs)
- E – Jack (1pc)
- F – Adjuster Rod for Top Link (1pc)
- G – ½" Bent Pins (2pcs)

Step 2. Slide sweeper to back of pallet.



Remove the wooden blocks that are attached to the pallet from the ends and back of the sweeper.



Slide the Yacare back to the edge of the pallet

Step 3. Install Wheels




Install both wheels with valve stem facing out.

Tighten lug nuts in a star pattern to 75-85 ft. lbs.

See special note below.

Valve Stem

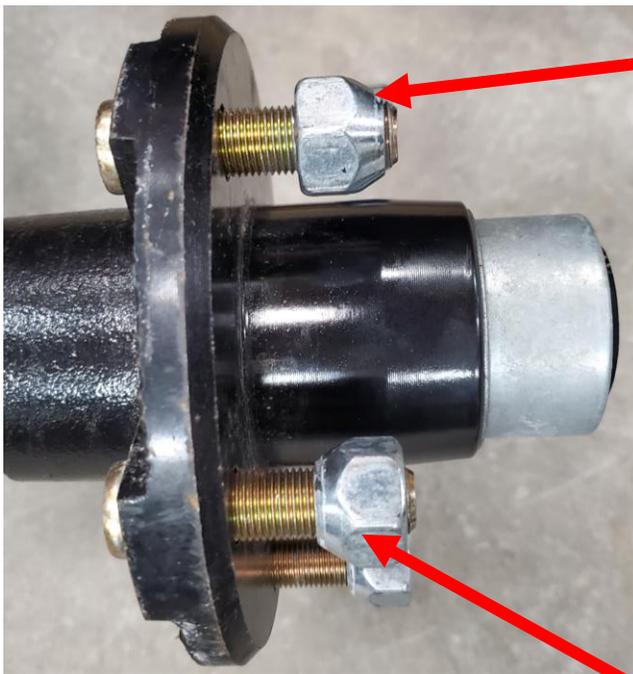

Wrong

Special note:

The photo to the left is showing the lug nuts on the threaded studs.

When installing the lug nuts the Cone must be facing inwards.

Correct

Step 4. Install Release Handles & Tongue



Install Release Handles on each end of the sweeper and tighten using a 9/16 wrench.



Install Steel Tongue and insert a Bent Pin and clip.

Make sure the bent pin actually goes thru the hole in the tongue.

Step 5. Install Jack and Coupler



Install the Jack.



Install Coupler Assembly and insert a Bent Pin and clip.



Remove the Yacare Magnetic Sweeper from the pallet.

Assembly is now complete.

See Operating Instructions next.