

Assembly Instructions




Bumper Mount Bracket A

 **Bluestreak**equipment MAGNETICS
APPLICATION DRIVEN DESIGN

Bluestreak Equipment
1645 Hwy #3, Delhi, Ontario, Canada N4B 2W6

What's in the Box

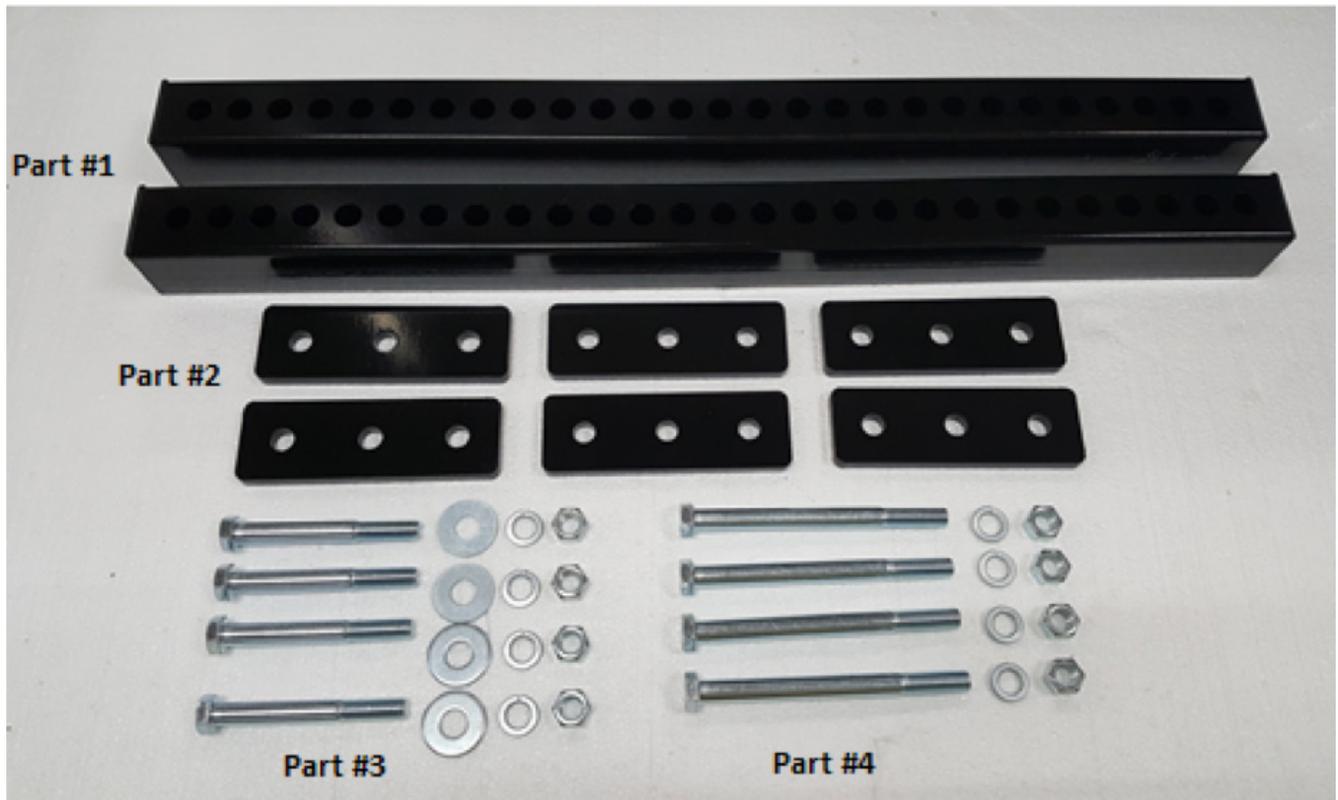

Part #1 – 28" Steel Tubes - 2pcs


Part #2 – 0.375" Steel Clamp Plate - 6pcs

Part #3 – 0.5" x 4" Bolt, washer, lock washer and nut - 4pcs

Part #4 – 0.5" x 6" Bolt, lock washer and nut - 4pcs


Bumper Mount Bracket A

Bumper Mount Bracket A is designed to attach to vertical steel bumpers as found on many commercial vehicles. Bumper Mount Bracket A is also designed to attach to Hanging Bracket accessory A, B or C. Hanging Bracket A, B or C suspends your Magnetic Sweeper from your vehicle as shown below.

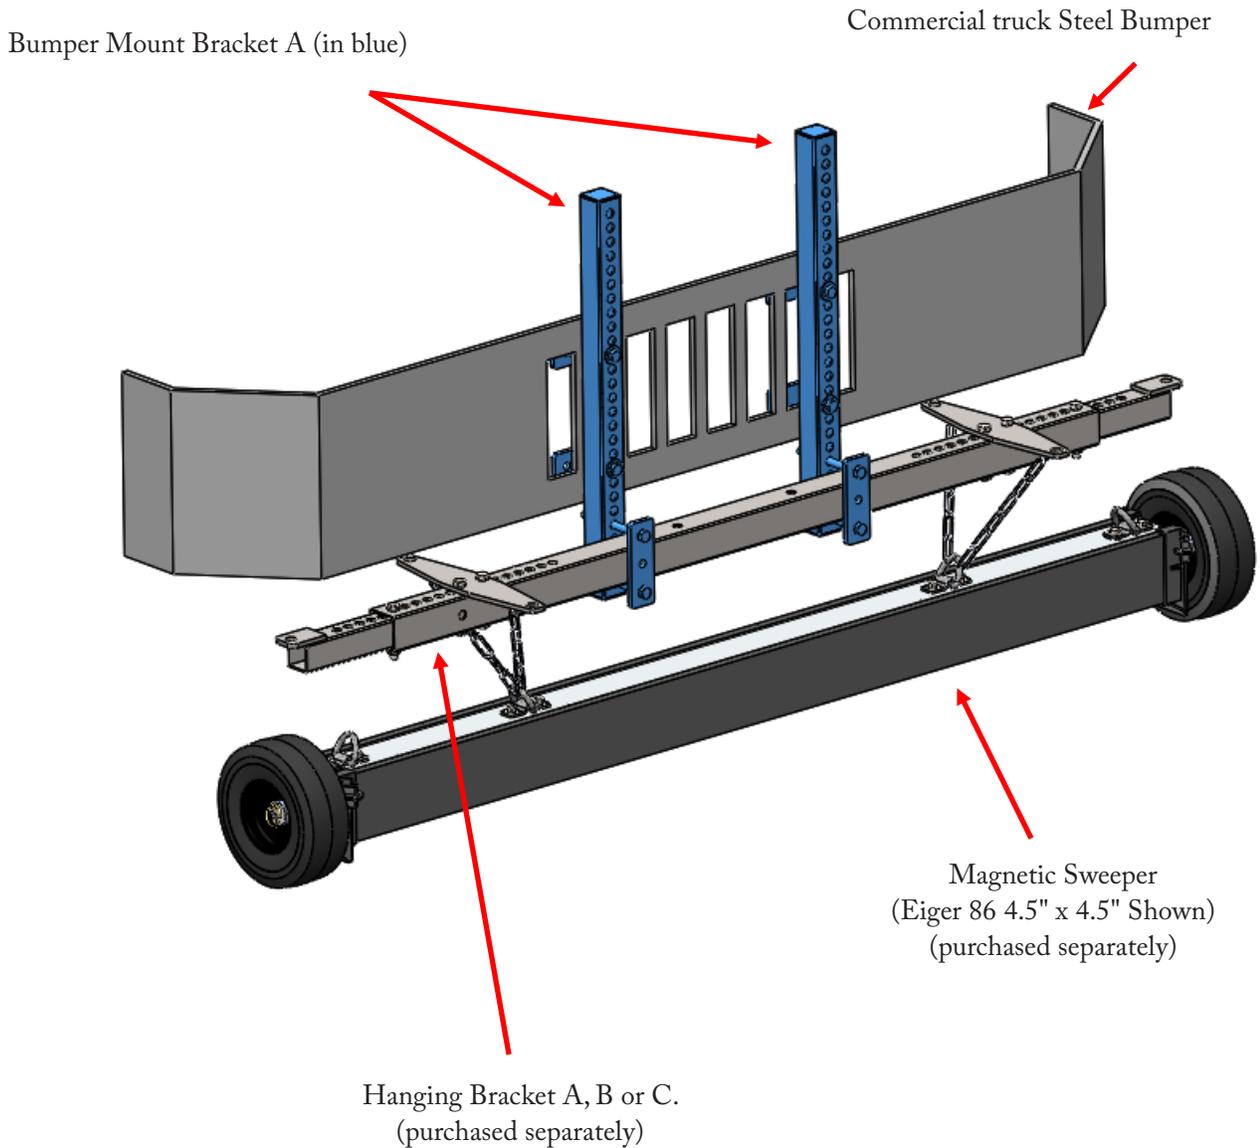

Step 1



Attach the 28" inch Steel Tubes to the bumper of the commercial truck as shown. Keep the bottom of the Tubes at least 12" off of the ground. This 12" clearance will provide room for the magnet to move upwards and not contact the brackets in the case of a deep pothole etc.

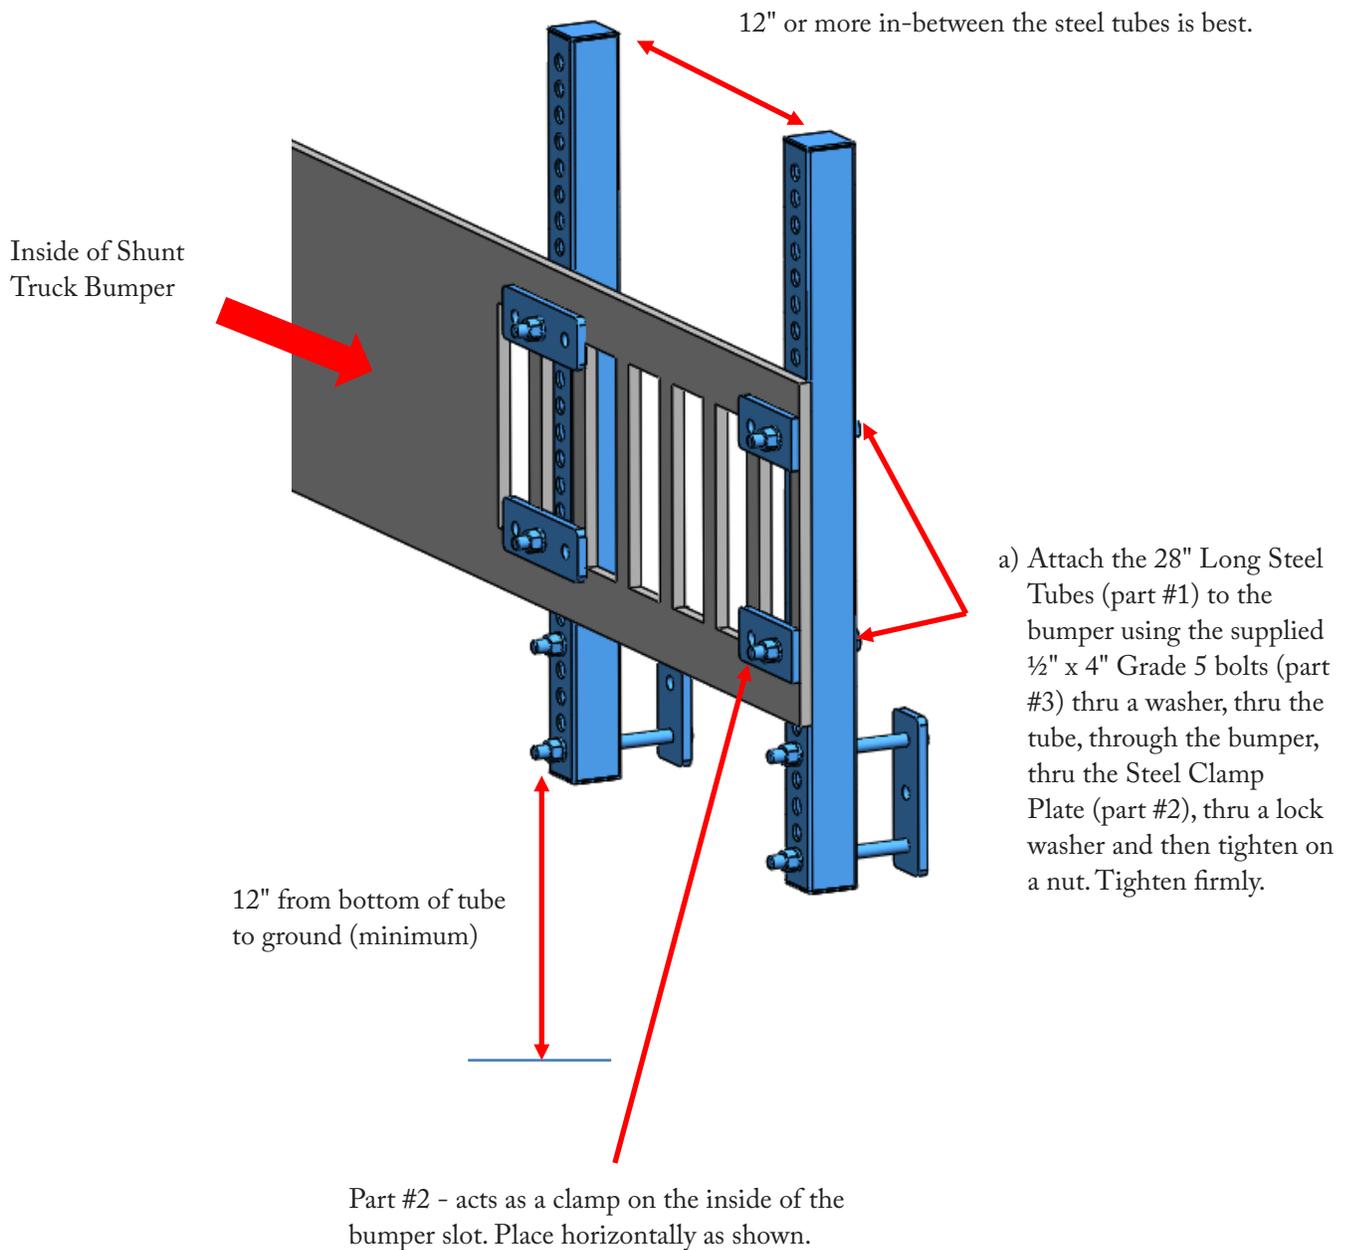

Step 2

Attach Hanging Bracket A, B, or C to Bumper Mount Bracket A.

Bumper Mount Bracket
(in blue)

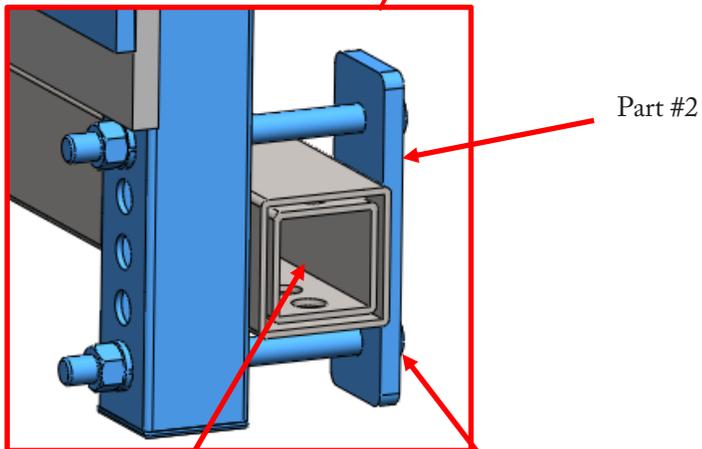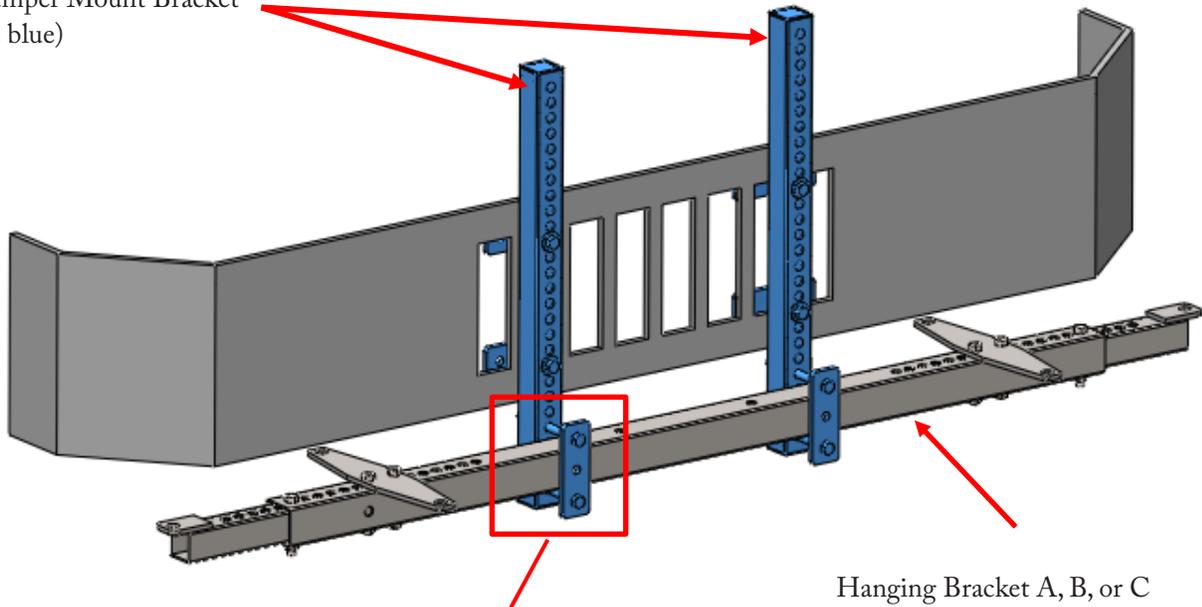


Hanging Bracket A, B, or C

Attach the Hanging Bracket using (part #2), and two ½" x 6" bolts with lock washers and nuts (part #4) as shown. Tighten firmly.

Step 3

Suspend the Magnetic Sweeper from Hanging Bracket A, B, or C as per the installation instructions provided with your Magnetic Sweeper and Hanging Bracket.

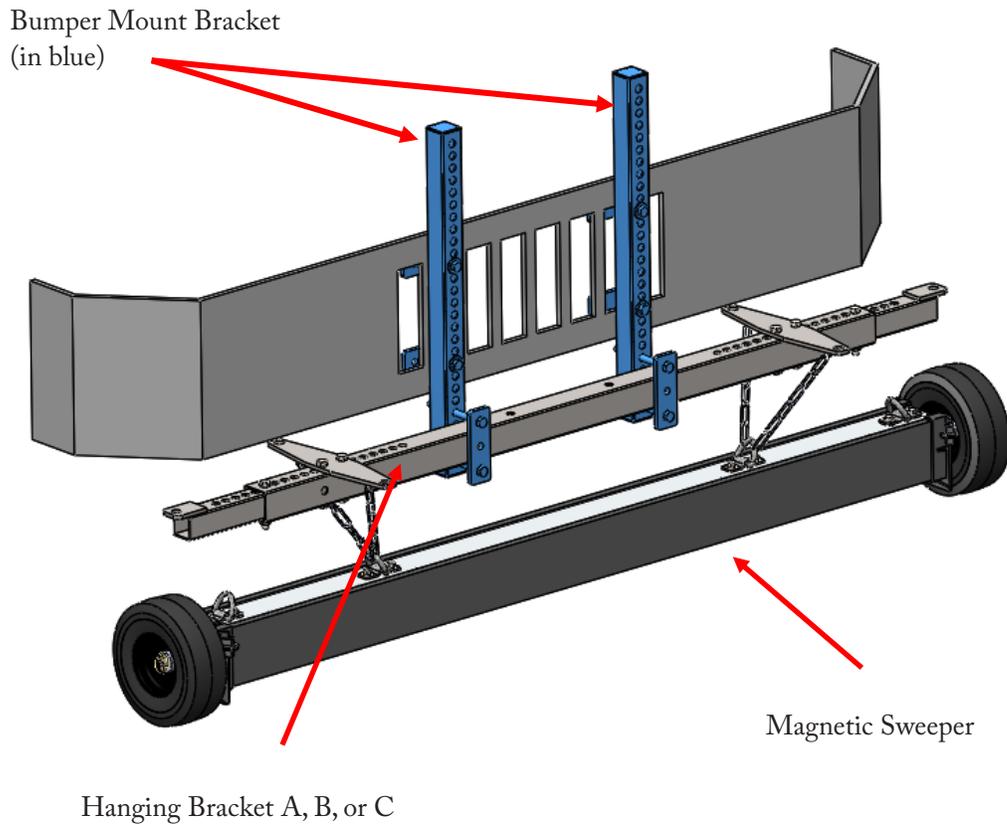

Bluestreak Equipment • 1645 Hwy #3, Delhi, Ontario, Canada N4B 2W6

www.blustreakequipment.com