

Accessory Installation Manual

MAMMOTH



 **Bluestreak**equipment MAGNETICS
APPLICATION DRIVEN DESIGN



Bluestreak Equipment
1645 Hwy #3, Delhi, Ontario, Canada N4B 2W6

Installing the Optional Debris Digging Rake

When the sweeper is disconnected from the tow vehicle

- Raise sweeper to highest sweeping height and pin for safety
- Lift sweeper from rear using a forklift
- Slide the DDR assemblies into the DDR mount tubes on the front of the sweeper



- Pin the DDR assemblies at the highest position
- Lower sweeper to the ground
- Unpin and lower the DDR assembly and pin at the desired digging depth
- Lower sweeper to the desired sweeping height

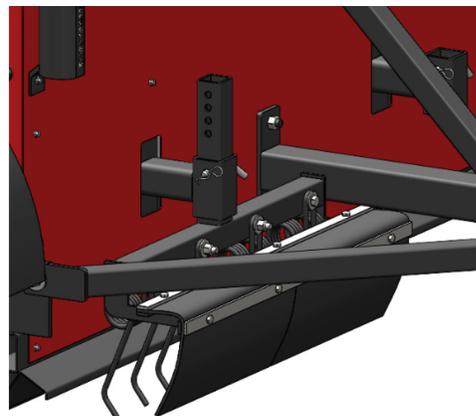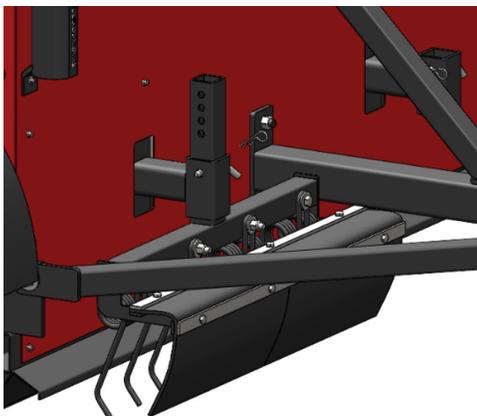



Installing the Optional Grader

When the sweeper is disconnected from the tow vehicle

1. Position grader behind sweeper
2. Line up grader with mounting tabs on sweeper
3. Bolt though each tab with 3/8" x 1.75" bolt (1pc) installed though grader link 1, though a washer, though the mounting tab, though a washer, through grader link 2 and install the nut
4. On each side install the one of the provided chains between points A and B

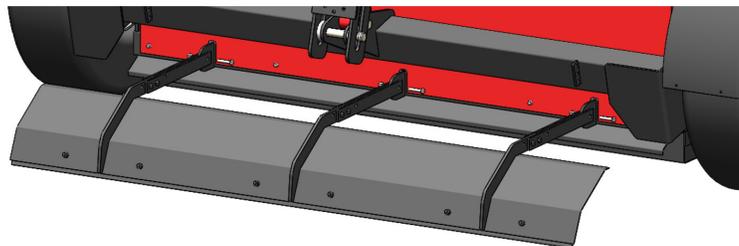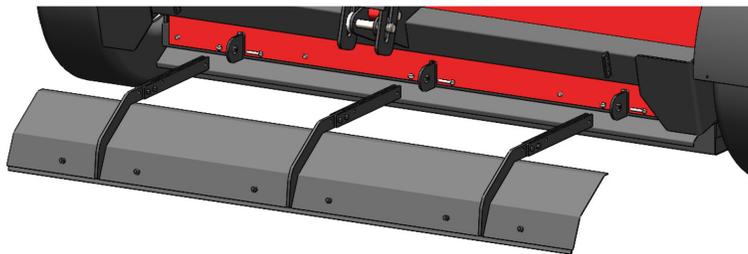

3/8" x 1.75" - Grader link 1 - 3/8" washer - Mounting tab - 3/8" washer - Grader link 2 - 3/8" nut

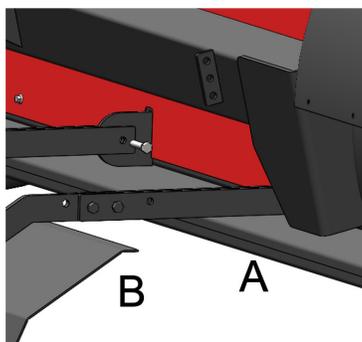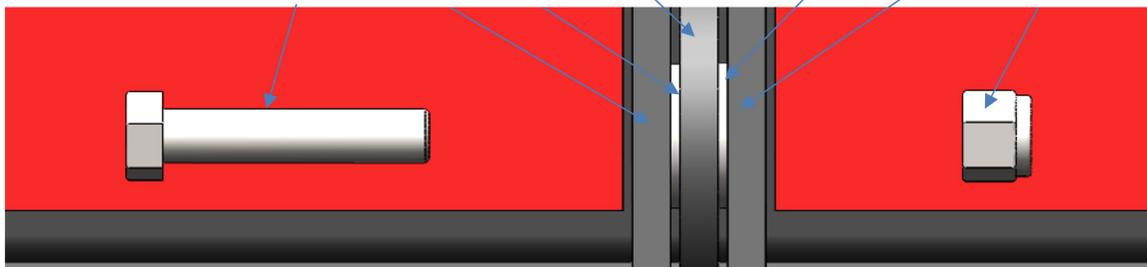

Bluestreak Equipment • 1645 Hwy #3, Delhi, Ontario, Canada N4B 2W6

www.bluestreakequipment.com