

Assembly Instructions


NOMIC



Bluestreakequipment MAGNETICS
APPLICATION DRIVEN DESIGN

Bluestreak Equipment
1645 Hwy #3, Delhi, Ontario, Canada N4B 2W6

Unpackage and gather the following

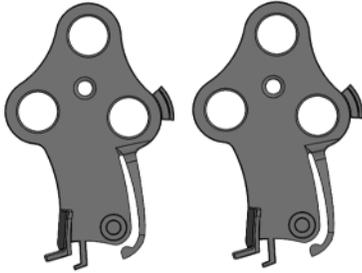

Tripod - 2pcs



Cord Cleat - 2pcs



Pivot - 6pcs




4mm Nuts - 6pcs



Pin - 1pcs




Pot Magnets - 6pcs

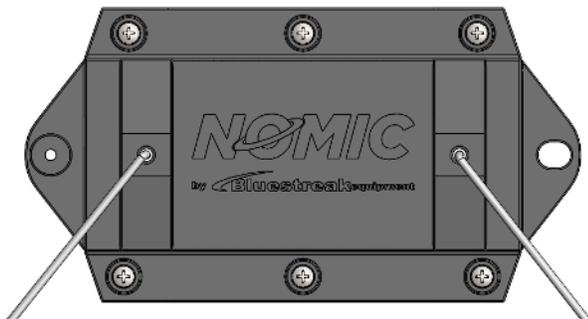

Magnet Assembly - 1pc

Assemble the Tripod Assemblies (2 units)

No Tools Required for this step.

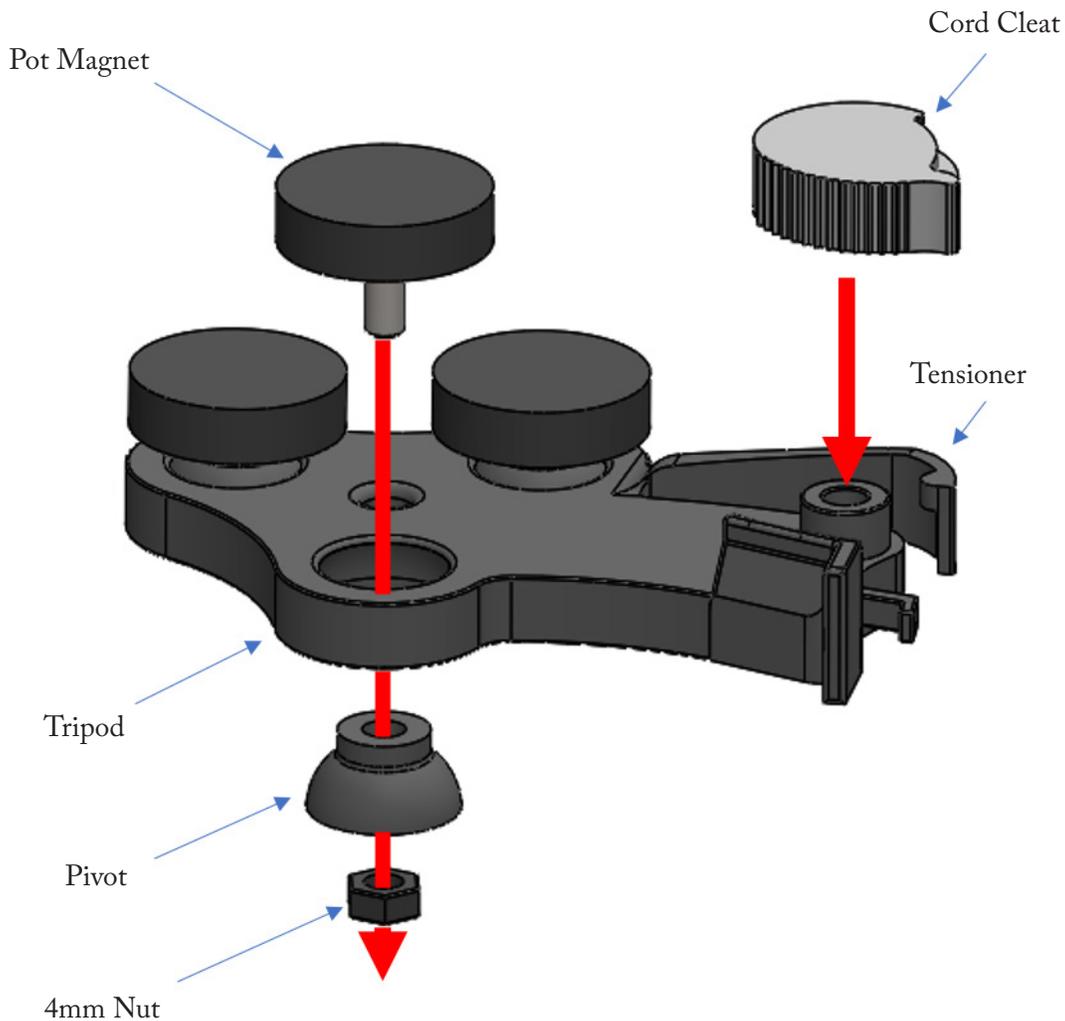


To install the Pot Magnets, place a 4mm nut into the bottom of a Pivot, hold the Pivot with the 4mm nut in the Tripod. Screw the Pot magnet down into the Pivot with nut. Finger tight is ok. Repeat for the other 2 Pot Magnets

To install the Cord Cleat onto the Tripod, pull the tensioner outwards some to help install the Cord Cleat.


Attach the Tripod Assemblies to Magnet Assembly

No Tools Required for this step.

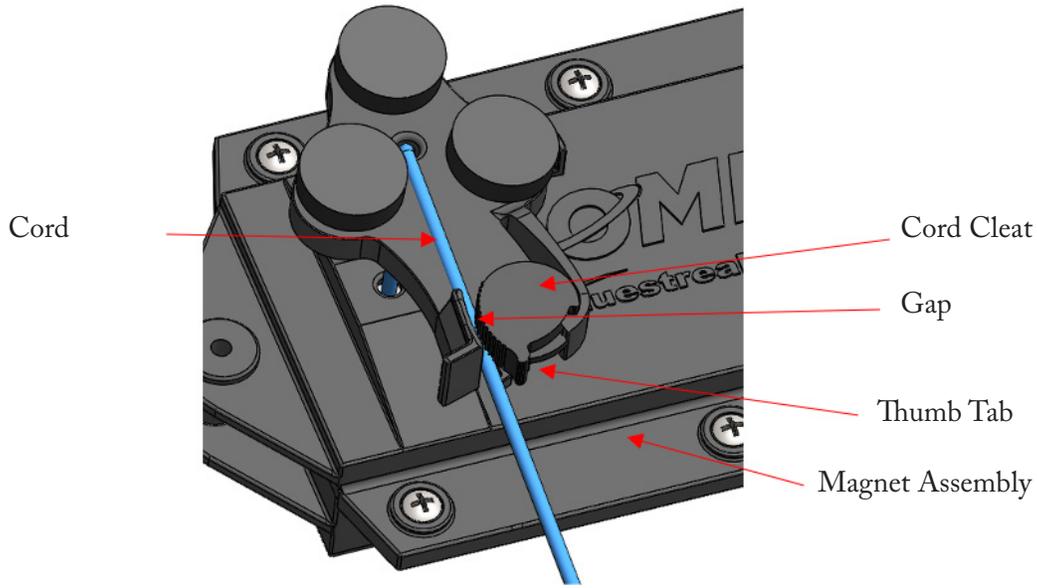


Insert the Cord through the hole in the center of the Pot Magnets. Then place the Cord through the adjustable gap on the left side of the Cord Cleat. Use the Thumb Tab to open the gap to help insert the Cord.

Attach Multiple Units Together

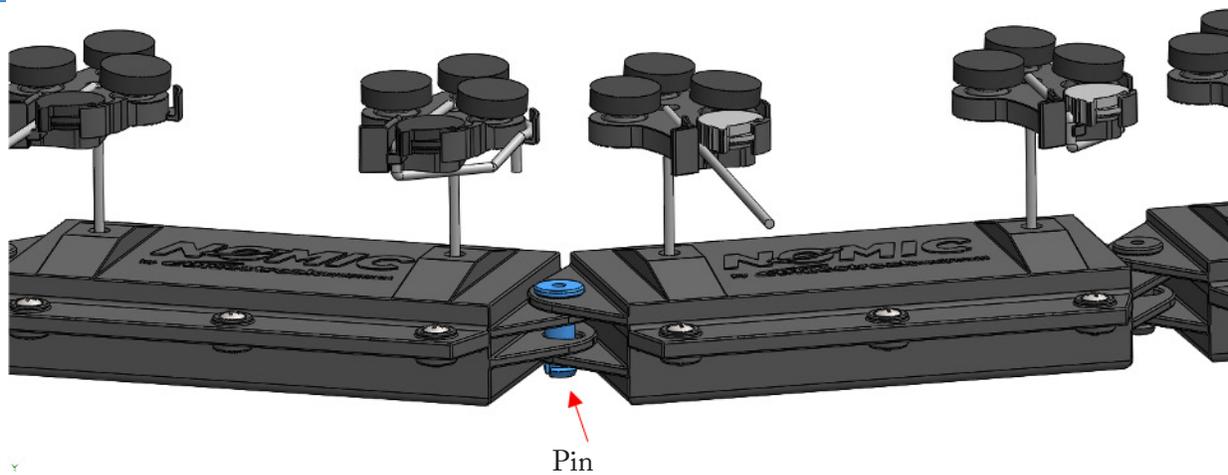


Multiple units can be attached together with the Pin if more than 1 unit is being used. This controls swaying and possible incidental attachment of one unit to another.

Prepare for Attachment to Underside of Vehicle

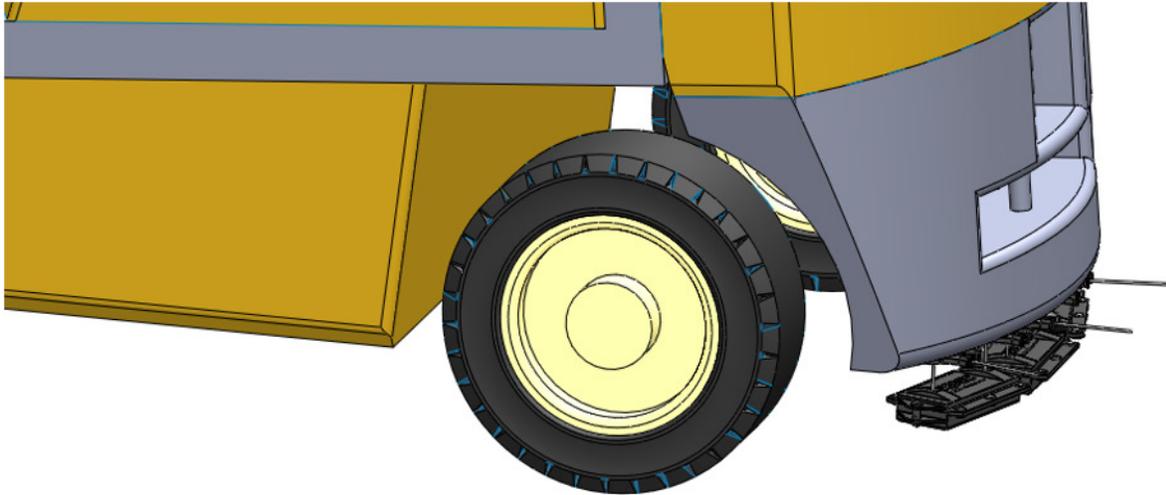

Place the magnet assemblies on the ground underneath the vehicle and arrange so that no part of the magnets will stick out past the edge of the vehicle they are mounted to. Then, wipe off desired area of vehicle where the magnet will be attached to.


Attach Tripod Assemblies to Underside of Vehicle

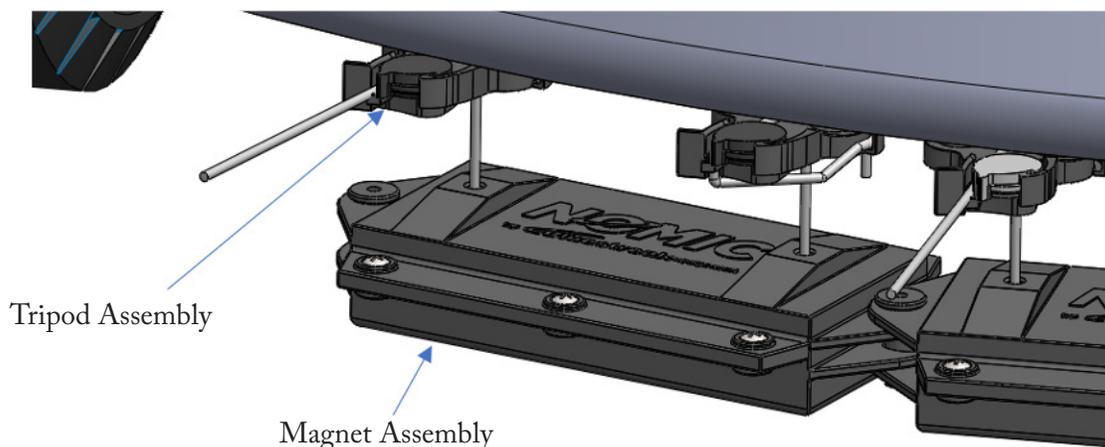

Attach the Tripod Assemblies to the underside of the vehicle directly above where the cord comes out of the top of the magnet assembly.

Ensure the Tripod Assembly is oriented such that the cord cleat is facing outwards toward you. This will ensure you can adjust the height of the NOMIC easily.


Adjust the Ground Clearance

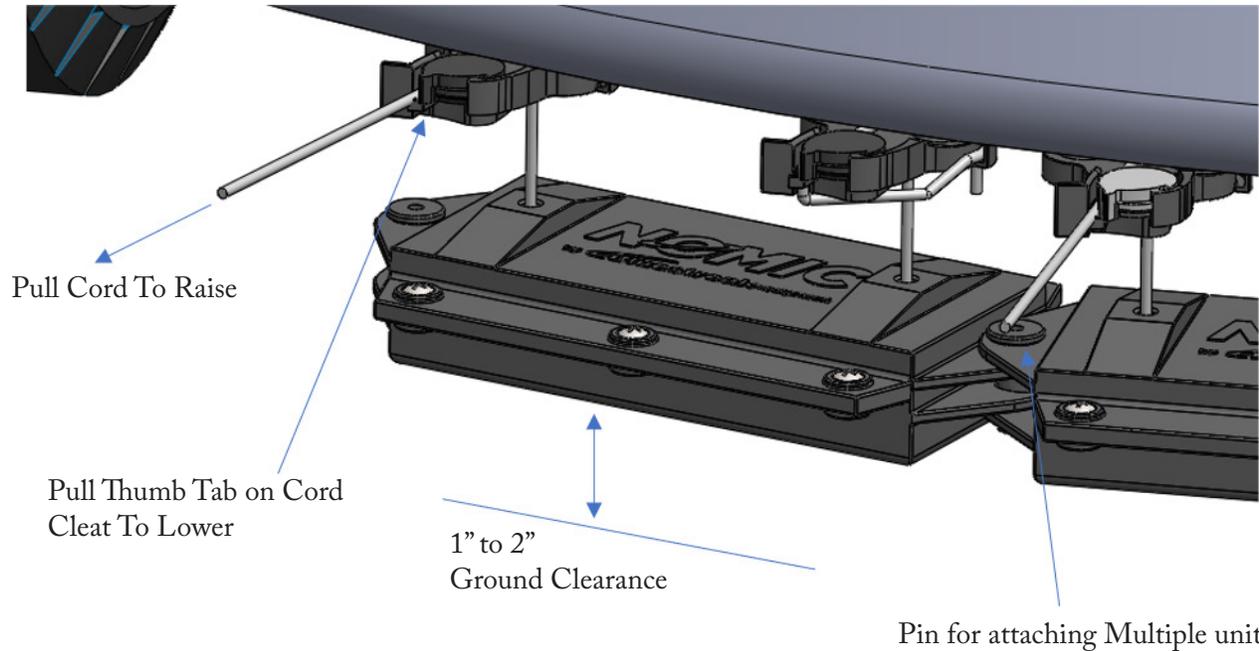

The Nomic should be set up so there is a ground clearance of 1" to 2". In order to do this you can pull on the Cord to lift the sweeper(s) up, or push on Thumb Tab on Cord Cleat to let cord out to lower the sweeper(s).

- When in final position the Nomic Magnetic Sweeper should not be touching the ground while in operation.
- All cords should be equally as tight to evenly distribute the weight across all of the cords.


Cord Management

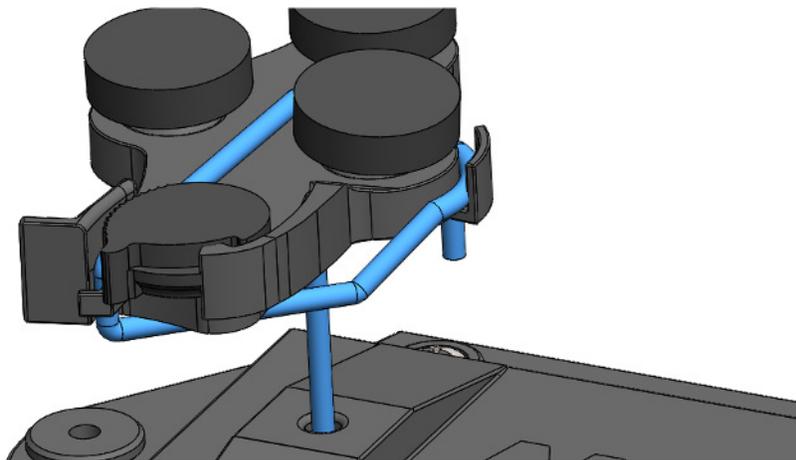

Excess Cord can be routed as shown above to keep the appearance of the installation tidy.


Operating Instructions

Step 1

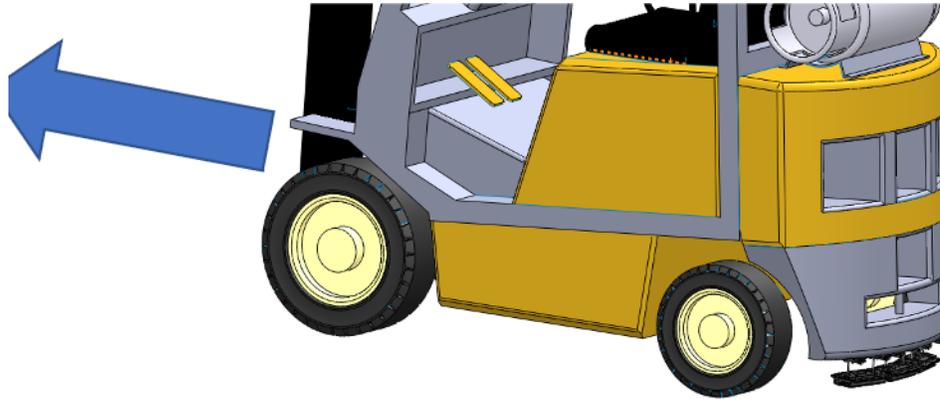

Drive around and collect Metal Debris

Step 2

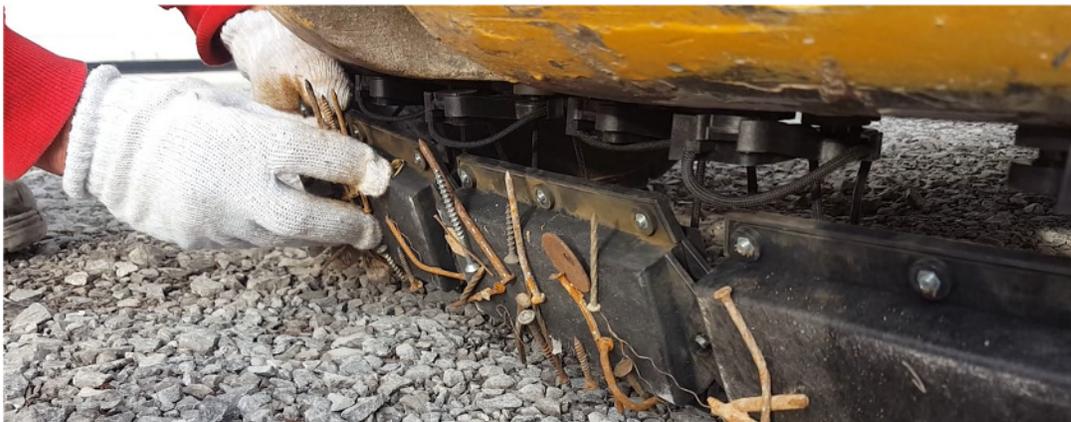

Stop the Vehicle. Apply parking brake.

Tilt Nomic Magnetic Sweeper(s) vertically with one hand and clean off with glove or rag.

Bluestreak Equipment • 1645 Hwy #3, Delhi, Ontario, Canada N4B 2W6

www.bluestreakequipment.com