Assembly Instructions





Bluestreak Equipment 1645 Hwy #3, Delhi Ontario, Canada N4B2W6


Un-package the product. The Oblast magnetic Sweeper is packaged on 1 pallet with 2 boxes that contain Release handles and hardware, and the Steel T-handles for the fork Pockets. Leave the sweeper on the pallet for now.



Contents of Box #1



Contents of Box #2

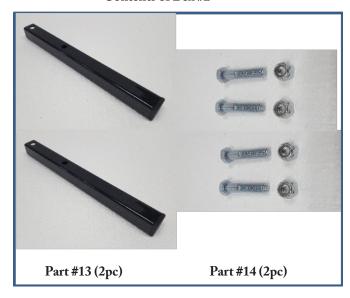

Box #1

Safety Instructions, Assembly Instructions and Operating Instructions Part #4-2pcs-Steel T-Handle


Box #2

Part #13 – 2 pcs – Steel Release Handle

Part #14 – 2 pcs - Release Handle Bolts 0.375" x 1.75" (2 pcs) with nyloc nuts (2pcs)



Install both T-Handles. Screw the T-Handles in until the screw enters the hole in the top of each fork pocket.

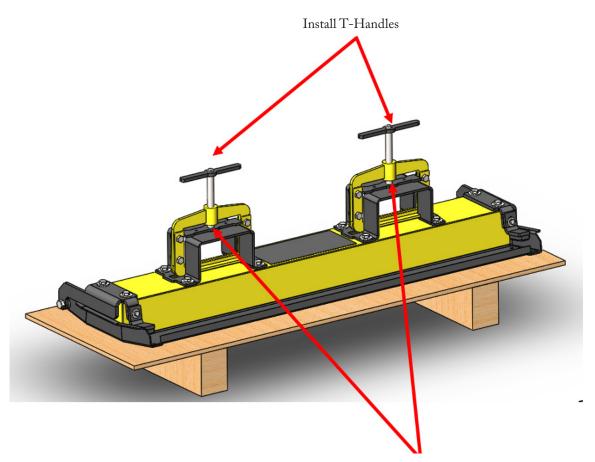


Hole in Top of Fork Pocket



Set the width of your forks to match the width of the Holes in the fork pockets. Drive inwards until the tip of your fork is sticking out at least 6" inches.

Note: the inside width of the fork pockets is 7" inches wide and therefore forks up to 6" inches wide can be easily used.


6" of Fork (minimum) Sticking out on each fork.

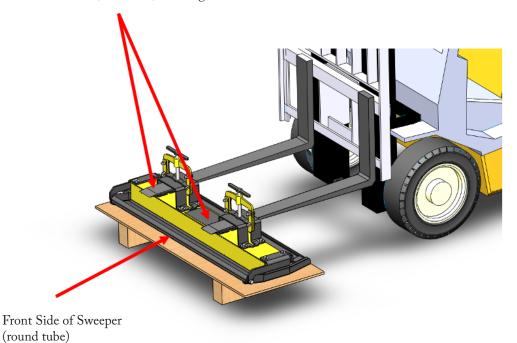




Lift up the Magnetic Sweeper slightly so the weight is on the forks.

Tighten the T-handle on each fork pocket until the Yellow Hoop is pushing into the bottom of the fork. This clamping design will keep the magnet from moving on your forks when operating and during the clean off process.

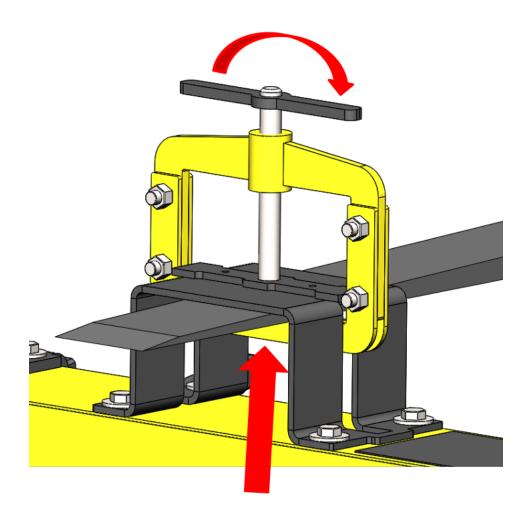




After both fork pockets are tightened lift the magnet up approximately 5 feet off of the pallet.

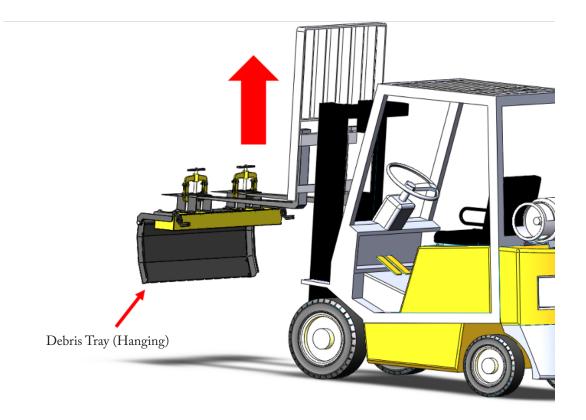



Install the Release Handles (Part #13) onto each end of the Debris Tray as shown. Use the 0.375" x 1.75" bolts (2 pcs) and nyloc nuts (2pcs) provided.

Note: The nuts need to be located on the top as shown.

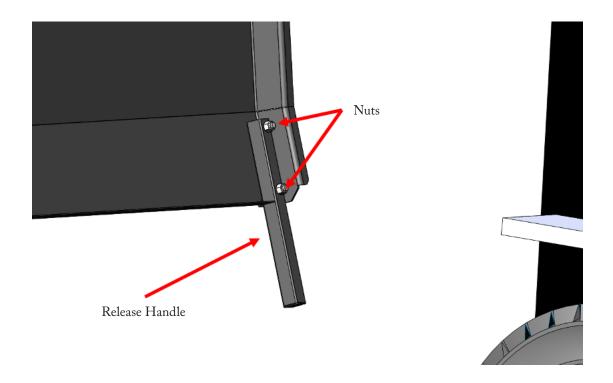



Close the Debris Pan by lifting upwards on the Release Handle.

Note: The Debris Tray is held in position at the top by magnets that contact each Release Handle on each end of the sweeper.

Assembly is now complete.

