




Assembly Instructions

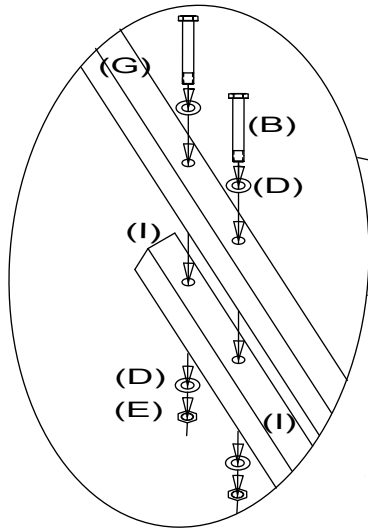


4. Handle with Grips Attachment

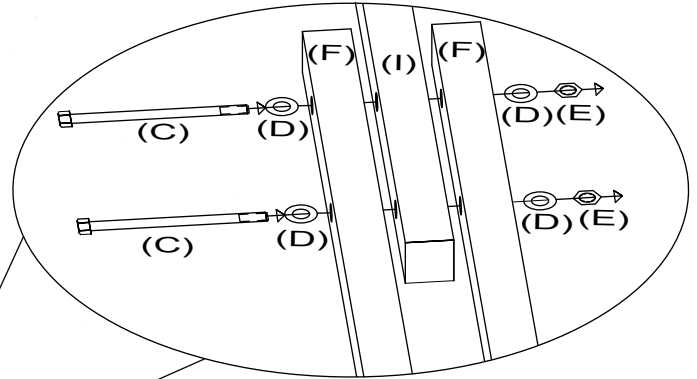

3. Attaching Lower Handle to Upper Y-handle Connector

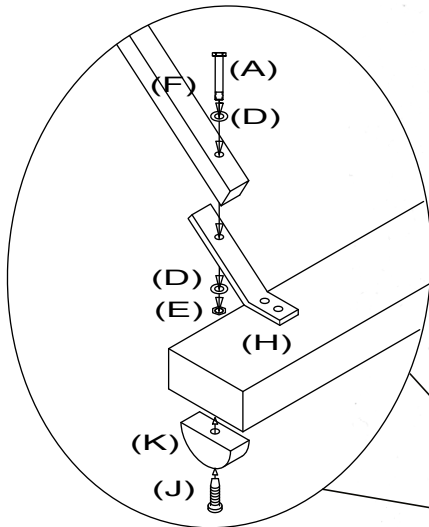

2. Lower Y-Handle Arms

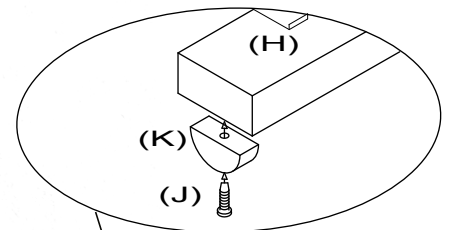

1. UHMW Wear Puck Assembly


Tundra Series™

For further assembly help please view the assembly video online at:
www.bluestreakequipment.com

Tundra Series Assembly Instructions

- (1) Attach a UHMW wear puck (Item K) to bottom of Magnetic Sweeper Assembly (Item H) using 1 Screw (Item J) and repeat for the opposite end of sweeper.
- (2) Lower Y-handle Arms (Item F) are installed on the front of the uprights of the Magnetic Sweeper Assembly (Item H). Attach Lower Y-handle Arms (Item F) to Magnetic Sweeper Assembly (Item H) Using 2 (1/4" x 1 1/2") Hex Bolts (Item A), 4 Washers (Item D), and 2 Hex Nuts (Item E). Do not tighten bolts until completing step (4)
- (3) Attach Lower Y-handle Arms (Item F) to Upper Y-Handle Connector (Item I) using 2 (1/4" x 2 3/4") Hex Bolts (Item C), 4 Washers (Item D), and 2 Hex Nuts (Item E). Do not tighten bolts until completing step (4)
- (4) Attach Handle with Grips (Item G) to Upper Y-Handle Connector (Item I) using 2 (1/4" x 2") Hex Bolts (Item B), 4 Washers (Item D), and 2 Hex Nuts (Item E). Tighten all bolts firmly using two 7/16 wrenches.

What's in the box

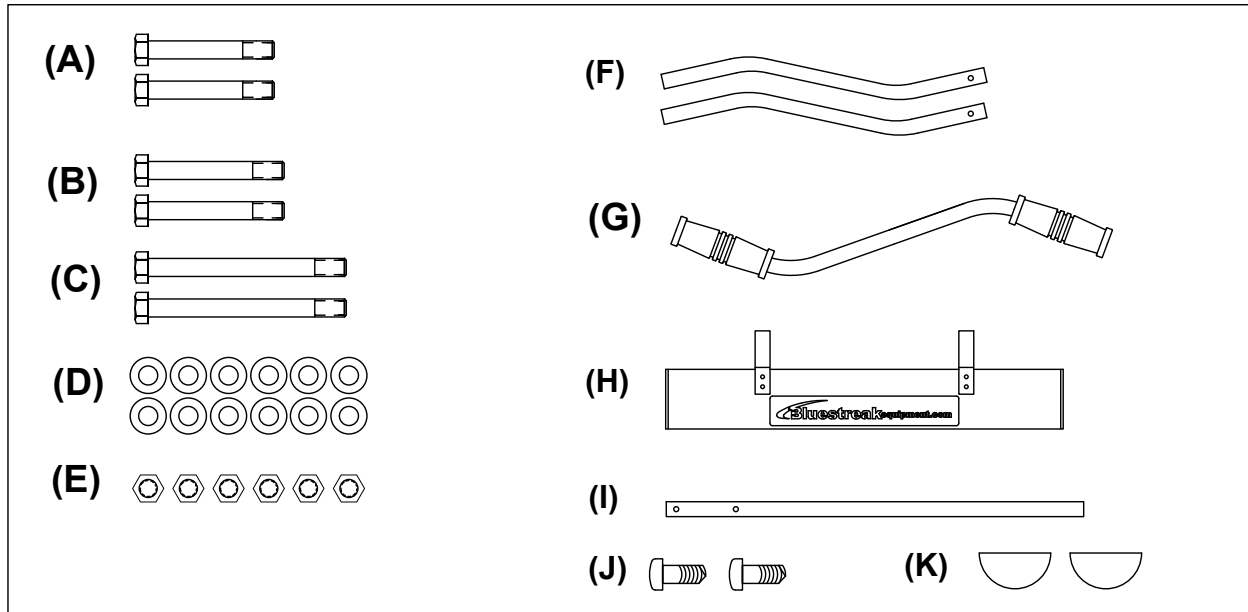

Item	Quantity	Description
(A)	2pcs	1/4" x 1 1/2" Hex Bolts
(B)	2pcs	1/4" x 2" Hex Bolts
(C)	2pcs	1/4" x 2 3/4" Hex Bolts
(D)	12pcs	1/4" Washers
(E)	6pcs	1/4" Hex Nuts
(F)	2pcs	Lower Y-handle Arms
(G)	1pc	Handle with Grips
(H)	1pc	Magnetic Sweeper Assembly
(I)	1pc	Upper Y-handle connector
(J)	2pcs	Screws
(K)	2pcs	UHMW wear pucks

- Tools Needed:**
- 7/16" wrench x 2
 - Screwdriver x 1

